


I N S T E O N<sup>®</sup>



**INSTEON Leak Sensor**  
Quick Start Guide


# INSTEON Leak Sensor

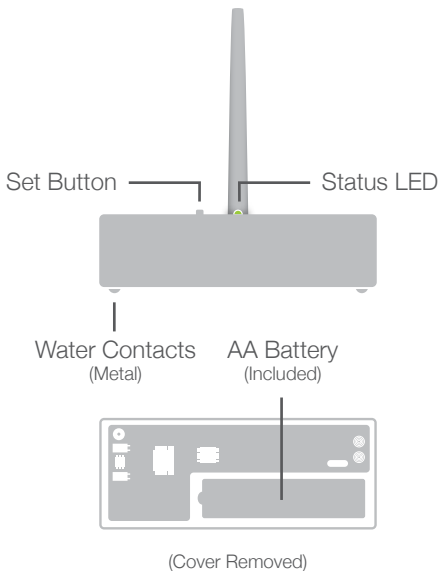

For the complete Owner's Manual and more, visit: [insteon.com/support](http://insteon.com/support)


## Sensor Placement

Locate the Leak Sensor in a location that may experience a water leak.

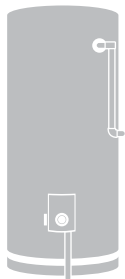


## Enhanced with the INSTEON Hub

For text message or email alerts, your Leak Sensor must be linked to the INSTEON Hub.

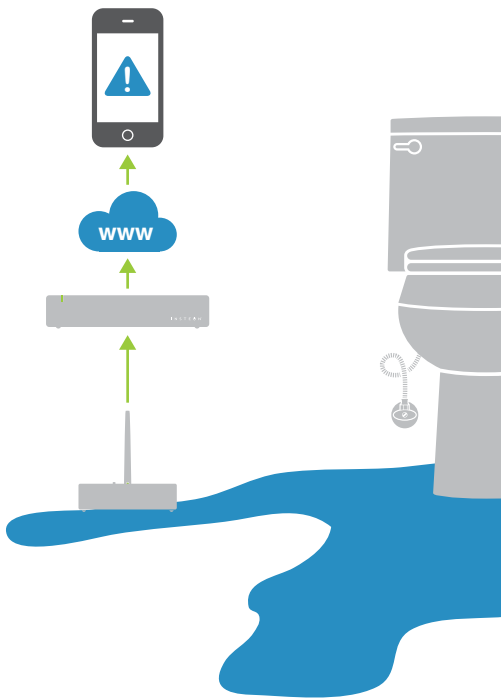


## Linking to the Hub

- 1 Follow the on-screen instructions to add your Leak Sensor to the INSTEON Hub.

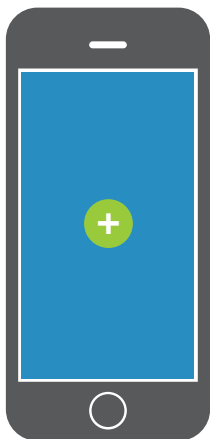


If not using the Hub, refer to the instructions that came with your product.

- 2 When prompted, press and hold Leak Sensor's set button.

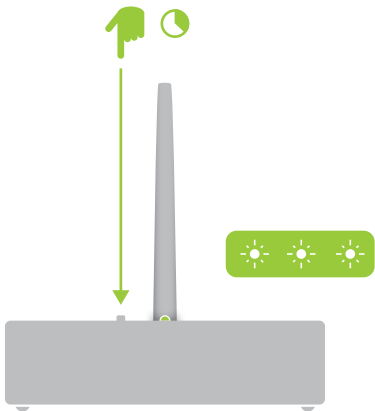

## Test Alerts

- 1 Place your sensor onto a wet sponge or tray of water no more than 1/8" deep.

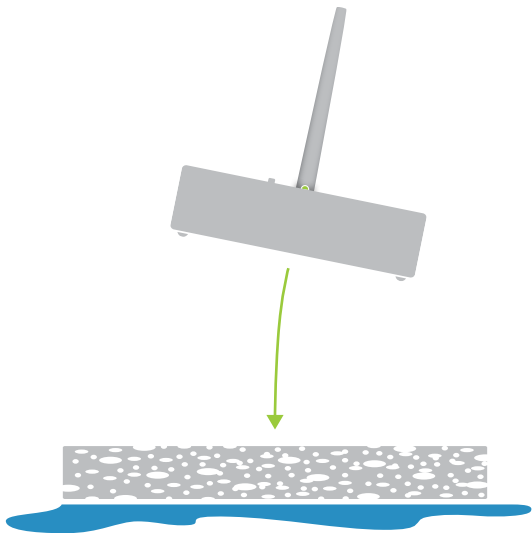

2

After you receive an alert on your mobile device, reset the Leak Sensor by tapping the set button and return the Leak Sensor to its location.

